

EN	<p>Dear Customer,</p> <p>Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), which in turn continued the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH.</p> <p>We hope you enjoy your Gigaset.</p>	DA	<p>Kære Kunde,</p> <p>Gigaset Communications GmbH er retlig efterfølger til Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videreførte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forstås som Gigaset Communications GmbHs forklaringer.</p> <p>Vi håber, du får meget glæde af din Gigaset.</p>
DE	<p>Sehr geehrte Kundin, sehr geehrter Kunde,</p> <p>die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführte. Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen.</p> <p>Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.</p>	FI	<p>Arvoisa asiakkaamme,</p> <p>Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)-yhtiksen oikeudenomistaja, joka jatkoi puolestaan Siemens AG:n Gigaset-liiketoimintaa. Käyttöoppaissa mahdollisesti esiintyvät Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina.</p> <p>Toivotamme Teille paljon iloa Gigaset-laitteestanne.</p>
FR	<p>Chère Cliente, Cher Client,</p> <p>la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuivait elle-même les activités Gigaset de Siemens AG. Donc les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH.</p> <p>Nous vous souhaitons beaucoup d'agrément avec votre Gigaset.</p>	SV	<p>Kära kund,</p> <p>Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH.</p> <p>Vi önskar dig mycket nöje med din Gigaset.</p>
IT	<p>Gentile cliente,</p> <p>la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH. Le auguriamo tanta soddisfazione con il vostro Gigaset.</p>	NO	<p>Kjære kunde,</p> <p>Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH.</p> <p>Vi håper du får stor glede av din Gigaset-enhet.</p>
NL	<p>Geachte klant,</p> <p>Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft overgenomen. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien.</p> <p>Wij wensen u veel plezier met uw Gigaset.</p>	EL	<p>Αγαπητή πελάτισσα, αγαπητέ πελάτη,</p> <p>η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), η οποία έχει αναλάβει την εμπορική δραστηριότητα Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC στις οδηγίες χρήσης αποτελούν επομένως δηλώσεις της Gigaset Communications GmbH.</p> <p>Σας ευχόμαστε καλή διασκέδαση με τη συσκευή σας Gigaset.</p>
ES	<p>Estimado cliente,</p> <p>la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH.</p> <p>Le deseamos que disfrute con su Gigaset.</p>	HR	<p>Poštovani korisnici,</p> <p>Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH.</p> <p>Nadamo se da sa zadovoljstvom koristite svoj Gigaset uređaj.</p>
PT	<p>SCaros clientes,</p> <p>Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH.</p> <p>Desejamos que tenham bons momentos com o seu Gigaset.</p>	SL	<p>Spoštovani kupec!</p> <p>Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH.</p> <p>Želimo vam veliko užitkov ob uporabi naprave Gigaset.</p>

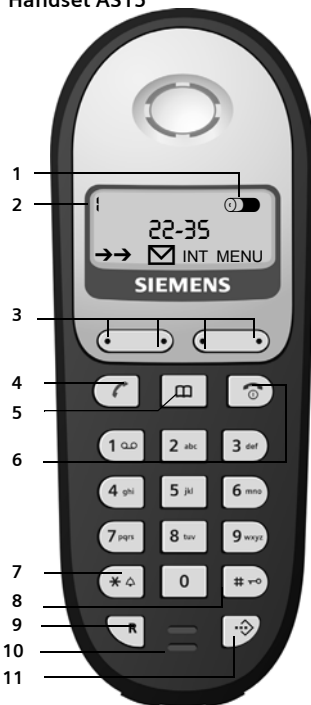
CS	Vážení zákazníci, společnost Gigaset Communications GmbH je právním nástupcem společnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), která dále přejala segment produktů Gigaset společnosti Siemens AG. Jakékoli prohlášení společnosti Siemens AG nebo SHC, které naleznete v uživatelských příručkách, je třeba považovat za prohlášení společnosti Gigaset Communications GmbH. Doufáme, že jste s produkty Gigaset spokojeni.	PL	Szanowny Kliencie, Firma Gigaset Communications GmbH jest spadkobiercą prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), która z kolei przejęła segment produktów Gigaset od firmy Siemens AG. Wszelkie oświadczenia firm Siemens AG i SHC, które można znaleźć w instrukcjach obsługi, należy traktować jako oświadczenia firmy Gigaset Communications GmbH. Życzymy wiele przyjemności z korzystania z produktów Gigaset.
SK	Vážený zákazník, Spoločnosť Gigaset Communications GmbH je právnym nástupcom spoločnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktorá zasa pokračovala v činnosti divízie Gigaset spoločnosti Siemens AG. Z tohto dôvodu je potrebné všetky vyhlásenia spoločnosti Siemens AG alebo SHC, ktoré sa nachádzajú v používateľských príručkách, chápať ako vyhlásenia spoločnosti Gigaset Communications GmbH. Veríme, že budete so zariadením Gigaset spokojní.	TR	Sayın Müşterimiz, Gigaset Communications GmbH, Siemens AG'nin Gigaset işletmesini yürüten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kılavuzlarında bulunan ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapılmış bildiriler olarak algılanmalıdır. Gigaset'ten memnun kalmanızı ümit ediyoruz.
RO	Stimate client, Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rândul său, a continuat activitatea companiei Gigaset a Siemens AG. Orice afirmații efectuate de Siemens AG sau SHC și incluse în ghidurile de utilizare vor fi, prin urmare, considerate a aparține Gigaset Communications GmbH. Sperăm ca produsele Gigaset să fie la înălțimea dorințelor dvs.	RU	Уважаемые покупатели! Компания Gigaset Communications GmbH является правопреемником компании Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), которая, в свою очередь, приняла подразделение Gigaset в свое управление от компании Siemens AG. Поэтому любые заявления, сделанные от имени компании Siemens AG или SHC и встречающиеся в руководствах пользователя, должны восприниматься как заявления компании Gigaset Communications GmbH. Мы надеемся, что продукты Gigaset удовлетворяют вашим требованиям.
SR	Poštovani potrošaču, Gigaset Communications GmbH je pravni naslednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG. Stoga sve izjave od strane Siemens AG ili SHC koje se mogu naći u korisničkim uputstvima treba tumačiti kao izjave kompanije Gigaset Communications GmbH. Nadamo se da ćete uživati u korišćenju svog Gigaset uređaja.		
BG	Уважаеми потребители, Gigaset Communications GmbH е правопреемникът на Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), която на свой ред продължи бизнеса на подразделението Siemens AG. По тази причина всякакви изложения, направени от Siemens AG или SHC, които се намират в ръководствата за потребителя, следва да се разбират като изложения на Gigaset Communications GmbH. Надяваме се да ползвате с удоволствие вашия Gigaset.		
HU	Tisztelt Vásárló! A Siemens Home and Communication Devices GmbH & Co. KG (SHC) törvényes jogutódja a Gigaset Communications GmbH, amely a Siemens AG Gigaset üzletágának utódja. Ebből következően a Siemens AG vagy az SHC felhasználói kézikönyveiben található bármely kijelentést a Gigaset Communications GmbH kijelentésének kell tekinteni. Reméljük, megelégedéssel használja Gigaset készülékét.		

Gigaset AS150 english

Handset AS15

Base

- 1 Charge status of the battery pack
- 2 Internal number of the handset
- 3 Display keys
- 4 Talk key
- 5 Directory key
- 6 End call and On/Off key
- 7 Ringer on/off (long press)
- 8 keypad lock (long press)
- 9 Recall key
 - Confer (Flash)
 - Dial pause (long press)
- 10 Microphone
- 11 Speed dial list key

Register/Paging key
(page 4/page 5)

Display keys:

Pressing the keys launches whichever function appears above them in the display.

Display icon	Meaning when pressed
→→	Open the last number redial list (page 4).
✉	Open the calls or network mailbox list (page 4).
INT	Open the list of registered handsets (page 5).
MENU	Open main menu/submenu.
↑ and ↓	Scroll up/down, or adjust volume.
← and →	Move cursor to the left/right.
↩	Backspace deletes one character at a time.
OK	Confirm menu function or store an entry.

Safety precautions



Read this manual and the safety precautions carefully before use. Explain their contents to your children, and the potential hazards associated with using the telephone.



Only use **the mains unit supplied**.



Fit only the **approved rechargeable battery pack**! Never use a conventional (non-rechargeable) battery pack as this could damage your health and cause injury. Use the battery pack as directed in these instructions (page 6).



The operation of medical appliances may be affected. Be aware of the technical conditions within the particular environment (e.g. doctor's practice).



The handset may cause an intrusive 'hum' in hearing aids. Do not hold the handset against your ear while it is ringing (incoming call).



Do not install the phone in a bathroom or shower room as the handset and base are not splash-proof. (page 7)



Do not use the telephone in environments subject to explosion hazard (e.g. auto paint shops).



If you give your Gigaset to someone else, make sure you also give them the operating manual.

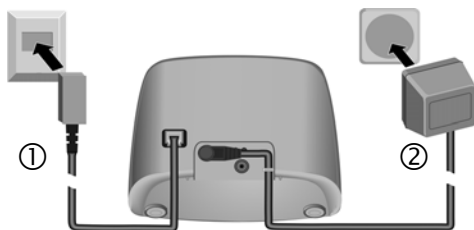


Dispose of the battery pack and telephone in accordance with environmental regulations.

Do not pollute the environment. Emergency numbers cannot be dialled if the keypad lock (page 3) is activated! Not all of the functions described in this manual are available in all countries.

Setting up the telephone for use

Step 1: Connecting the base

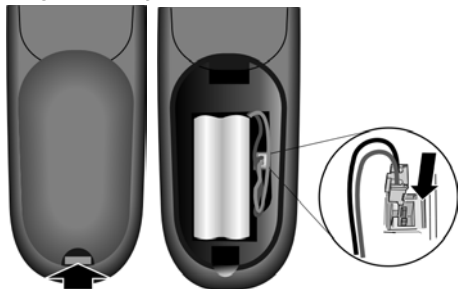


Connect the phone jack with the phone cord ① and the mains units (230 V) with the power cord ② as shown. Place the cords in the cord recesses. The two cords must be plugged in at all times.

- ◆ Only use the supplied mains unit (see the bottom of the base) and the supplied phone cord.
- ◆ If you ever purchase another phone cord from a store, ensure that the phone conductors are correctly connected: 3-4 connection of the telephone conductors/EURO CTR37.

Step 2: Setting up the handset

Fitting the battery pack



- ◆ To open the battery compartment, push the tongue on the battery cover inwards (see picture on left) and lift off the cover.
- ◆ Fit the left side of the battery pack under the clips then press down on the right side so that the pack snaps home.
- ◆ Plug the jack firmly into the socket (see picture on right).

- ◆ To close the battery compartment, position the cover and press until it snaps home.

- ◆ Place the battery leads in the cable guides so that the battery cover cannot catch on the leads and damage them when it is closed.
- ◆ Only insert the recommended rechargeable **battery pack**, i.e. never use a normal battery pack as this could damage your health and cause injury.
- ◆ Never use non-Siemens battery chargers as this could damage the battery pack.
- ◆ Only place the handset in the base/charging cradle that is intended for it.

Step 3: Registering the handset to the base and charging the battery pack

Place your handset in the base with the **display facing forwards**. The handset will now register **automatically** to the base. For procedure see page 4.

Charging the battery pack


To charge the battery pack, leave the handset in the base for approx. ten hours. The battery pack is now fully charged. The charge status of the battery pack is correctly displayed only after uninterrupted charging/discharging. You should not therefore interrupt the charging process.

Charging is electronically controlled to prevent overcharging. The battery pack heats up during charging; this is normal and not dangerous. After a time the charge capacity of the pack will decrease for technical reasons.

You must set the date and time to ensure that the times of calls are logged correctly (page 9). Your telephone is now ready to use.

If you have any queries about the use of your telephone, please read the tips under "Questions and answers" (page 7) or contact our service (Customer Care, page 8).

Activating/deactivating the handset

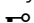
Press the 'end call' key  and hold.

If you place a deactivated handset in the base station or charger, it will automatically activate.

Activating/deactivating the keypad lock

You can "lock" the keys on the handset to protect the keypad against inadvertent activation.

To activate: press the hash key **#** and hold.

The display shows the icon .

To deactivate: press the hash key **#** and hold.



The keypad lock deactivates automatically when you receive a call and activates again after the call.




When the keypad lock is active **you cannot even call emergency numbers!**

Making calls


Making external calls/Ending a call

External calls are calls using the public telephone network.

 (Enter the number) → .


The number is dialled. (Or you can **first** press  [dial tone] and then enter the number.) During the call you can adjust the earpiece volume with  and .

End the call/cancel dialling:

Press the end call key .

You can automatically insert a network provider prefix before any number (see Menu Tree, PRESELECT, page 9).

Answering a call

Your handset rings and you wish to take the call: Press the talk key .

If "Auto Answer" is active (page 6) just lift the handset out of its base/charging cradle.

Calling Line Identification

When you get a call, the caller's number will be displayed on your handset; the caller's name will be displayed if it is stored in the directory.

Requirements:

- 1 You have asked your network provider for the caller's number (CLIP) to be displayed on your handset screen.
- 2 The caller has asked the network provider for his number to be identified (CLI).

The display shows **<< >>** if you have not requested CLIP, **WITHHELD** if the caller has withheld CLI, or **UNAVAILABLE** if it has not been requested.

Muting

You can mute you handset when making external calls. The other party hears a wait melody. You do not hear your caller either.

Press the display key **INT**. The call is 'held' (wait melody).


To cancel the function: Press  briefly.

Using the directory and other lists

Directory and speed dial list

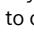

These two lists are used in the same way.

To open the directory: Press .



To open the speed dial list: Press .

Directory: Can store up to 20 numbers and associated names.

Speed dial list: Can store up to 8 numbers (12 digits max.), e.g. private phone numbers, prefixes of network providers ("Call-by-Call") etc.

Press the  or  key to open the required list then press **MENU**. The following functions are available:

EDIT ENTRY	Add/edit number and use to dial
NEW ENTRY	Save new phone number
SHOW ENTRY	Show/edit number
DELETE	Delete a single entry

Clear the list: / → **MENU** → **6** → **OK**.

Storing a number in the directory/speed dial list

/ → **MENU** → **NEW ENTRY**




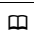



	Enter phone number and confirm.
	Directory: Enter name and confirm. Speed dial: Enter the digit of the required speed dial key (2–9), then enter the name and confirm.
	Long press (back to idle status).


Table for text/numerical entry: see page 6.

Cursor control: see page 1.

Dialling with the directory

	Open the directory.
	Enter the first letter of the name.
	If there is more then one entry, select the name.
	Press the talk key.

Speed dialling

Example: Press key **3** long → .

Last number redial list

This list contains the five last dialled numbers.

→→ (open the list) → **MENU**.

The following functions are available:

EDIT ENTRY	Add/edit number and use to dial
COPY TO DIR	Store number in directory

Clear the list: →→ → **MENU** → **6** → **OK**.

Dialling a number


You can select a number from the last number redial list:

→→ → Select an entry → ↶.

Calls list/Select services list

Press the display key  to open the caller list and select services list (see Menu Tree, page 9).

Calls list: The number of the last 30 missed calls are stored.


When the phone is in idle status, new missed calls are indicated by a flashing .

Example of how the calls list appears:

CALLS 02/08	Number of old, read entries
	Number of new entries

Opening the calls list and selecting an entry

You can view entries you have already read.

	Open calls list.
↓ CALLS OK	Confirm. The last incoming call is displayed.
↓	Select entry.


Using the calls list

 → Select an entry (see above) → **MENU**.

The following functions are available:

DELETE	Delete an individual number
COPY TO DIR	Store a number in the directory. Enter name
TIME	Establish date and time of a call
STATUS	Read or not read
DELETE LIST	Delete complete calls list

Calling back a caller from the calls list:

 → Select an entry → ↶.

Registering and de-registering handsets

You can register up to four handsets on your base station.

A Gigaset AS15 handset that is not yet registered on a base is registered **automatically**. Other handsets must be registered **manually**.

Automatic registering: Gigaset handset AS15

Any Gigaset AS15 handset that is not registered to a base can be registered automatically. To register a handset for the first time, place it in the base with the **display facing forward**. Registering takes about 1 minute; a number of icons flash in the display. The handset is **automatically** assigned the next available internal number (1–4). This number appears in the top left of the display after successful registering, e.g. "2". If all of the internal numbers 1 to 4 are used up (i.e. four handsets have been registered), handset number 4 is de-registered and overwritten.

Manual registering: Gigaset handset AS15

- 1. On the handset:** **MENU** → **REGISTER HS** → enter your system PIN (default is 0000) → **OK**. The display shows **REGISTER HS** during the registration procedure.
- 2. On the base:** Within **60 sec.** of entering the system PIN, press the register/paging key on the front of the base (page 1) and **hold** for approx. 3 sec. The registration process starts.

Manual registering: Other handsets

Other handsets are registered as follows:

- 1. On the handset:** Start to register your handset as described in its operating instructions.
- 2. On the base:** Press the register/paging key on the front of the base (page 1) for approx. 3 sec. The registration process starts.

De-registering handsets

You can de-register another handset from any registered Gigaset AS15handset as follows:

INT → Select handset → **MENU** →

DE-REG H/SET → **OK** →

Enter the system PIN (default is 0000) → **OK** →


DE-REGISTER? → **OK** → ☎ .

The internal number disappears from the de-registered handset. Handsets that have not been de-registered retain their internal number.

Using several handsets


Internal calls

Internal calls are no-cost calls to other handsets that are registered to the same base.

INT	Press the display key. Your own handset is marked "<".
either ...	Call a single handset:
	Enter number of handset, e.g. 2 .
or ...	Calling all handsets:
*	Press the star key.
... then	Ending the call:
☎	Press the end call key.

Internal conference/Call connecting


You are in conversation with an **external** caller.
To confer:

INT (the external party hears the wait melody) →
Select a handset →  (confer with internal party).

End: **MENU** → **GO BACK** → **OK**.

You are reconnected with the external caller.

Or to connect the call:

INT → Select a handset →  (announce the call if required) → ☎ Press the end call key.

You can also press the end call key ☎ immediately (without announcing the call). If the internal party does not answer or is busy the call will come back to you automatically.

Barging in on an external call

You are conducting an external call. An internal party can 'bargain in' on your call and join in the conversation (all parties hear a beep). **Requirement:** The **BARGE IN** function is activated.


Activating/deactivating internal barge-in

MENU → **BASE SET** → **ADD FEATURES** →

BARGE IN (✓ = on).

Internal barge-in

The display shows **LINE IN USE**. You wish to barge in on the call.

 Press the talk key.

You are connected. All parties hear a signal tone.

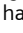
The display shows **LISTENING IN**.

End: ☎ Press the end call key.

If one of the internal parties presses the end call key ☎, a signal tone sounds. This does not affect the connection between the other handset and the external caller.

Looking for a handset ("paging")

If you have mislaid your handset you can page it with the help of the base. To do this, **briefly** (2 seconds max.) press the register/paging key on the front of the base (page 1). All handsets will ring at the same time.

End paging: **Briefly** press the registration/paging key (on the base) or the talk key  on any handset.



Pressing the registration/paging key for **more than 2 seconds** puts the base into registration mode. The handsets will not ring in this case.

Handset settings


Changing the display language

You can view the display texts in different languages.

MENU → 9 2 → Select language
(e.g. digit combination **01** for German)

0 1	German	0 6	Romanian
0 2	English	0 7	Croat
0 3	French	0 8	Czech
0 4	Slovenian	0 9	Polish
0 5	Hungarian	1 0	Russian

Activating/deactivating Auto Answer

When you get a call you can simply lift the handset out of the base or charger without having to press the talk key .

To activate: MENU → 9 1 1.

To deactivate: MENU → 9 1 0.

Activating/deactivating battery warning tone

If this function is activated, a beep sounds in idle status when the battery pack is almost flat.

To deactivate: MENU → 9 4 0.

To activate: MENU → 9 4 1.


Resetting the handset

Restoring the factory settings of the handset will **not** affect entries in the directory, the calls list or the speed dial list or the handset's registration to the base.

MENU → 93 → RESET ? → OK.

Base station settings

Changing pause after line seizure

You can change the length of the pause that is inserted between pressing the talk key  and sending the number:

MENU → 8 9 1 6 → The digit for the current pause length flashes: **1** = 1 sec.; **2** = 3 sec.; **3** = 7 sec.; **4** = 2.5 sec. → Enter digit → **OK.**

Changing the pause after the Recall key (dial pause)

You can change the length of the dial pause if your PABX requires this (refer to the operating instructions of the PABX):


MENU → 8 9 1 2 → The digit for the current pause length flashes: **1** = 800 ms; **2** = 1600 ms; **3** = 3200 ms → Enter digit → **OK.**

To insert a dial pause: press **R** for 2 seconds. A "P" appears in the display.

Appendix

Character set chart

Press the required key the number of times indicated.

	1 x	2 x	3 x	4 x	5 x	6 x
0	+	0	-		?	_
1	Space	1				
#	# (appears in display as )					
*	*	/	()	,	

Specifications

Power consumption

In ready status: approx. 2 Watt. During charging: approx. 3 Watt. During a call: approx. 2 Watt.

General specifications

Standard	DECT and GAP (compatible)
Range	up to 300 m outdoors, up to 50 m indoors
Mains unit	230 V ~/50 Hz
Operating temperature	+5 °C to +45 °C
Dimensions/Handset	155 x 56 x 28 mm (L x W x H)
Dimensions/Base	85 x 113 x 68 mm (L x W x H)
Weight/Handset	approx. 116 g (including battery pack)
Weight/Base	approx. 94 g
Re-chargeable battery pack	NiMH, 2xAAA Pack
Battery pack re-order number	V30145-K1310-X383
Battery pack capacity	approx. 410 mAh
Charging time	approx. 10 hours in base, approx. 5 hours in charging shell
Calling time	up to 9 hours
Standby time	up to 130 hours (5 days)

Care

Wipe the base station, charging cradle and handset with a **damp** cloth (do not use solvent) or an anti-static cloth.

Never use a dry cloth. This can cause static.

Contact with liquid

If the handset has come into contact with liquid:

- 1 **Switch off the handset and remove the battery pack immediately.**
- 2 Allow the liquid to drain from the handset.
- 3 Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.).
- 4 **Do not switch on the handset again until it is completely dry.**


When it has fully dried out, you will normally be able to use it again.

Questions and answers

If you have any queries about the use of your telephone, go to

www.siemens.com/qigasetcustomercare

for assistance 24/7. The table below contains a list of common problems and possible solutions.

Problem	Cause	Solution
Nothing appears in the display.	The handset is not switched on. Battery pack is flat.	Press the end call key  for approx. 5 seconds or place the handset in the base. Charge/replace the battery pack (page 2).
No response to key press, "HOLD KEY" appears in the display.	The keypad lock is activated.	Press the hash key # for approx. 2 sec (page 3).
No wireless connection to the base, different icons flash in the display.	The handset is outside the range of the base. The handset is not registered. The base is not switched on. Cords not routed correctly	Move the handset closer to the base. Register the handset (page 4). Check the power connector at the base (page 2). Check cord routing (page 2).
You cannot hear a ring/ dialling tone from the fixed network.	The supplied phone cord was not used or it has been replaced by a new cord with the wrong pin assignment.	Please always use the supplied phone cord and ensure that the pin connections are correct when purchasing a new one (page 2).

Problem	Cause	Solution
Error tone after entering system PIN. Forgot PIN	The system PIN entered is incorrect.	Restore the system PIN to the factory setting (0000). To do this disconnect the mains unit → hold down the paging-key → reconnect the mains unit → hold the paging key down for at least a further 2 seconds then release it. The resetting procedure is carried out. The handsets are deregistered. The calls list is deleted.

Authorisation

This device is intended for analogue phone lines in your network.

Country-specific requirements have been taken into consideration.

We, Siemens Home and Office Communication Devices GmbH & Co. KG, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:

<http://www.siemens.com/qigasetdocs>.

CE 0682

Service (Customer Care)

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:

<http://www.siemens.com/gigasetcustomer care>

This site can be accessed at any time wherever you are. It will give you 24/7 support for all our products. It also a list of FAQs and answers plus user guides for you to download. You will also find frequently asked questions and answers in the **Questions and Answers** section of this user guide in the appendix.

If the device needs to be repaired, please contact one of our Customer Care Centers:

Abu Dhabi.....	97 12 62 23 800	Latvia.....	7 50 11 18
Argentina.....	0800-888-9878	Lebanon.....	00961-1236110
Australia.....	1300 665 366	Luxembourg.....	40 66 61 56 40
Austria.....	05 17 07 50 04 (0,065 Euro/Min.)	Malaysia.....	603 77124304
Bahrain.....	97 31 73 11 173	Malta.....	+353 21 4940 632
Belgium.....	0 78 15 66 79	Mexico.....	01 80 07 11 00 03
Bosnia Herzegovina.....	033 276 649	Netherlands.....	0900-3333102 (0,25 Euro/min.)
Brazil.....		New Zealand.....	08 00 27 43 63
Grande Capitais e Regiões Metropolitanas:	4003 3020	Norway.....	22 70 84 00
.....	R\$ 0,14 (US\$ 0,069)	Oman.....	96 82 47 09 281
Demais localidades:	0800 888 3020	Poland.....	0 801 140 160
.....	R\$ 0,20 (US\$ 0,098)	Portugal.....	(351) 808 781 223
Bulgaria.....	02 873 94 88	Romania.....	02 12 04 91 00
Canada.....	866 247 8758	Russia.....	8 (495) 228 1312
China.....	0 21 400 670 6007 (RMB 0.11)	Serbia.....	0800 222 111
Croatia.....	016 10 53 81 (0,23 Kun)	Singapore.....	62 27 11 18
Czech Republic.....	233 032 727	Slovak Republic.....	02 59 68 22 66 (4,428 sk)
Denmark.....	35 25 86 00	Slovenija.....	0 14 74 63 36
Dubai.....	97 14 39 69 944	South Africa.....	08 60 10 11 57
Egypt.....	202 7623441	Spain.....	902 103935
Finland.....	09 23 11 34 25	Sweden.....	08 750 99 11
France.....	01 56 38 42 00 (Appel national)	Switzerland.....	0848 212 000 (0,08 SFr./Min.)
Germany.....	01805 333 222	Taiwan.....	02 23 96 10 06
(0,14 Euro/Min. aus dem Festnetz der Deut-		Thailand.....	02 722 1118
schen Telekom. Für Anrufe aus den Mobil-		Turkey.....	0 21 64 59 98 59
funknetzen können abweichende Preise		Ukraine.....	+380-44-451-71-72
gelten)		United Arab Emirates.....	0 43 66 03 86
Greece.....	801 1000 500 (0,026 Euro)	United Kingdom.....	0 84 53 67 08 12
Hungary.....	06 14 71 24 44 (27 Ft)	USA.....	1-866 247-8758
Ireland.....	18 50 77 72 77	(toll free)
Italy.....	199.15.11.15		
Jordan.....	00962 6 5625460/1/2		
Kuwait.....	00965-2464993		


Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Menu tree

Your phone has an extensive range of features. These are offered in the form of menus.

With the phone in the **idle status**, press **MENU** (open menu), scroll to the required function and then press **OK** to confirm your choice.

To return to idle status: press key  long.

There are two ways in which you can access a function:

- ◆ Scroll with keys **↑** and **↓**,
- ◆ Key in the appropriate digit combination, e.g. **MENU 3 1 2** to set the time.

1	SEL SERVICES	1-1	WITHHOLD NO
		1-2	CALL WAITING
		1-3	RINGBACK OFF
		1-4	CALL DIVERT

Select services are functions provided by your network provider. You can only use these services if you have requested them from your network provider. Your network provider can supply further information about these functions.
When you have chosen a select service, do not hang up until **after the confirmation tone** from the phone network.

The following select services are available during the call when you press the MENU display key: RINGBACK, ACCEPT, REJECT, EXTN CALL, END CALL, CONFERENCE, END CONF.

2	AUDIO SET UP	2-2	RINGER
		2-3	MELODY

5 level settings + "Crescendo" + OFF
10 selectable melodies

3	BASE SET	3-1	DATE/TIME
		3-2	SYSTEM PIN
		3-3	BASE RESET
		3-4	ADD FEATURES
		3-5	PRESELECT

3-1-1	DATE SET
3-1-2	CLOCK SET
3-1-3	CLOCK MODE

Input format: DDMMYY
Input format: HHMM
Select 12 or 24 hour clock

Change system PIN (default is 0000)

Restore factory settings (system PIN does not change, handsets are still registered)

3-4-1	DIAL MODE
3-4-2	TBR
3-4-3	BARGE IN

Select between TONE and PULSE
Use **↓** to select the setting
Activate/deactivate the function

3-5-1	PRESELECT NO
-------	--------------

Network provider prefix to be inserted **automatically** before any dialled number.

4	ANS MACHINE	4-1	MAILBOX
---	-------------	-----	---------

MAILBOX --> Store the number of the network mailbox for fast access (for dialling, press the **1** key **and hold** in idle status).

Network mailbox: Your service provider's answering machine; must be ordered separately. The network mailbox list can be displayed if your network service provider supports this function and the mailbox has been defined for fast access.

5	REGISTER HS
---	-------------